CHEFMAN

TOAST-AIR® TOUCH AIR FRYER + OVEN

QUICK START GUIDE

- Features and Accessories
- Before First Use
- Cleaning and Maintenance
- How to Cook with One Function
- How to Use the Dual Cook Function

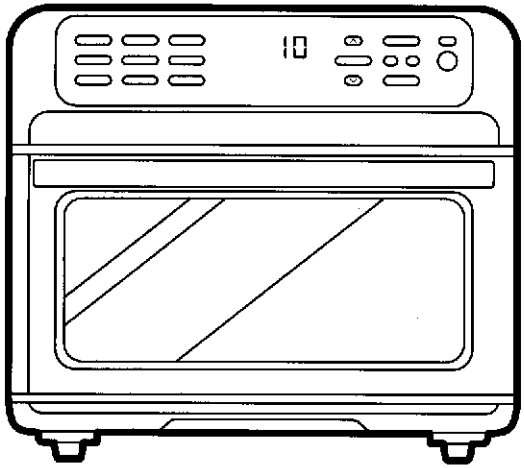

RJ50-SS-T

HOW TO COOK **WITH ONE FUNCTION**

STEP 1

Ensure the crumb tray is inserted in its position below the oven door and plug unit in.

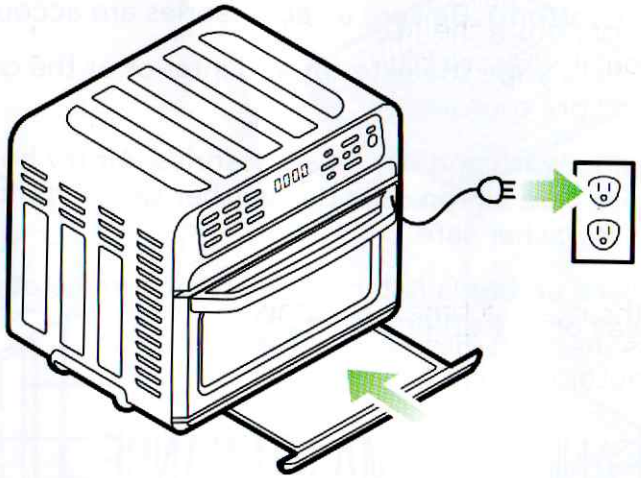

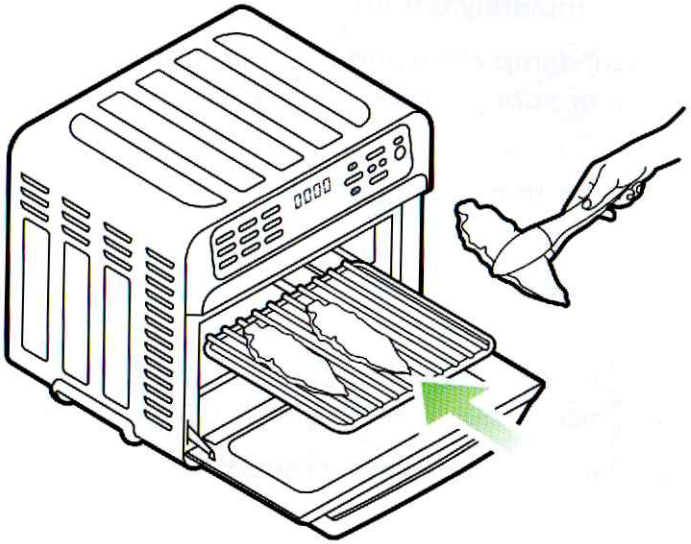

STEP 2

Put food on pan, wire racks, or basket and insert into oven.

STEP 3

Select Cook Function.

Set temperature and time by pressing the Temp/Time button then the up and down arrows. Set toast shade using just the up and down arrows.

Press Start/Stop.

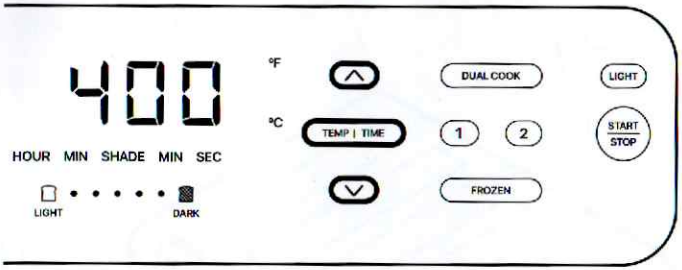

STEP 4

Cook until timer ends.

The unit will beep, the word End will appear on the display, and the oven will turn off.

Open door and remove food.

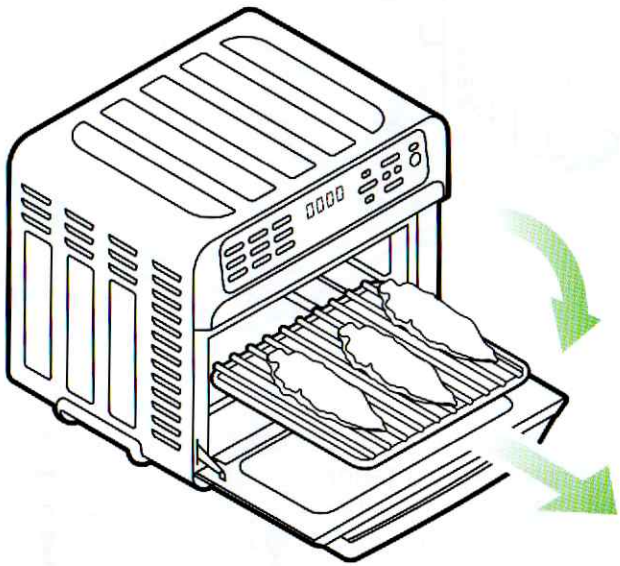

STEP 4

To set the second cook function, press the Number 2 button; it will turn blue.

STEP 5

Choose the cook function that you would like to finish with and then press that button; it will turn blue.

STEP 6

Set the desired time and temperature for the second cook function, then press the Start/Stop button. When the first function has finished, the unit will automatically switch to the second function.

STEP 7

Cook until timer ends.

The unit will beep, the word End will appear on the display, and the oven will turn off.

Open door and remove food.

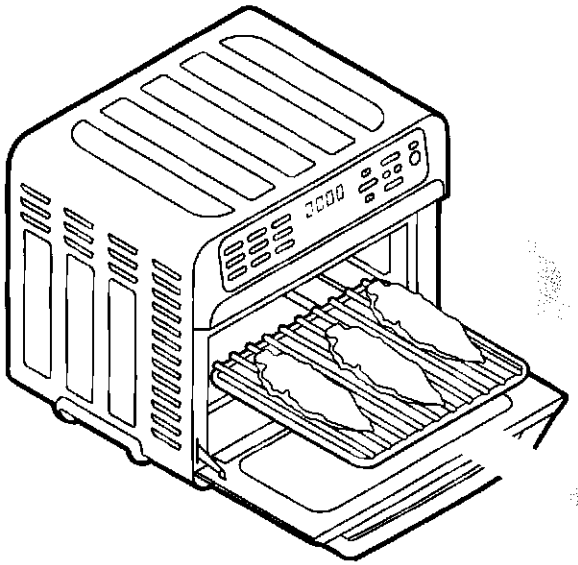

HOW TO USE THE **DUAL COOK FUNCTION**

STEP 1

Press the Dual Cook button; it will turn blue as will the Number 1 button.

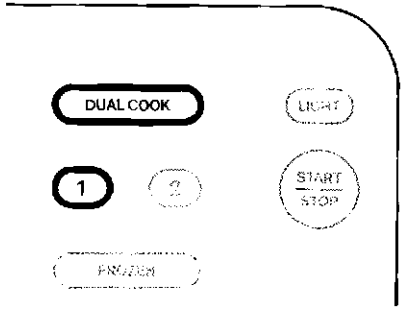

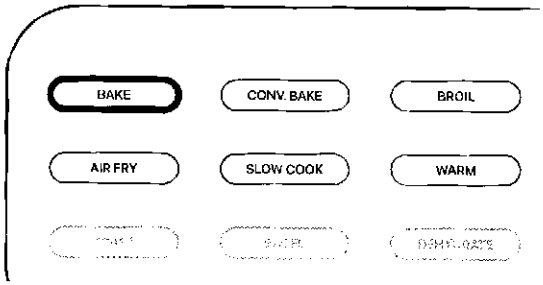

STEP 2

Select a function (choose from top two rows of function buttons) selected button will turn blue.

STEP 3

Set the desired time and temperature for the first cook function.

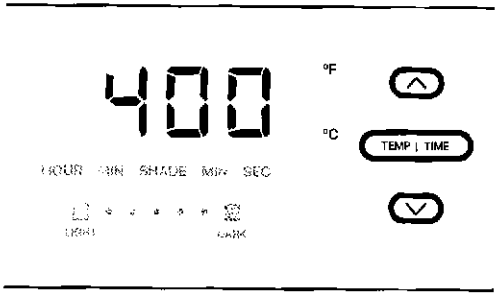

CHEFMAN®

@mychefman

www.chefman.com

©CHEFMAN 2020